

---

# Proscan Tv Remote Codes

---

*Proscan Tv Remote Codes*

*Downloaded from [old.setefor.com](http://old.setefor.com) by  
Carrillo Anna*

---

## MASTERING YOUR ENTERTAINMENT: THE ULTIMATE GUIDE TO PROSCAN TV REMOTE CODES

---

In today's world of home entertainment, simplicity is king. The last thing anyone wants is a coffee table cluttered with multiple remote controls. If you own a Proscan television, you have likely experienced the common frustration of losing the original remote or needing to consolidate your devices under a single universal controller. This is where understanding **Proscan TV remote codes** becomes an essential skill. Whether you are setting up a new universal remote, troubleshooting a connection, or simply trying to get your cable box to talk to your TV, having the right codes at your fingertips transforms a tedious task into a quick, satisfying setup. This guide will walk you through everything you need to know, from locating the correct codes to programming your remote in minutes, ensuring you get back to your favorite shows with minimal hassle.

---

### WHAT ARE PROSCAN TV REMOTE CODES?

---

At their core, **Proscan TV remote codes** are numeric sequences that act as a digital handshake between a universal remote

control and your television. When you enter a specific code, you are essentially teaching the remote how to communicate with the TV's infrared receiver. Each brand, and often each model series, uses a unique set of command protocols. Because Proscan televisions are manufactured by different parent companies and across various years, the codes required can vary significantly. These codes tell the remote which frequency to use for volume, power, input selection, and channel changes. Without the correct code, your remote is just a silent plastic brick. Knowing the right code bridges the gap between different devices, allowing seamless control from a single unit.

## Why Proscan Codes Can Be Tricky to Find

Proscan has a somewhat unique history in the consumer electronics market. The brand has been associated with different manufacturers over the years, which means the remote code database is not always consistent. Some Proscan TVs are built using RCA or Sanyo chassis, while others share circuitry with generic or store-brand televisions. This variability is precisely why a comprehensive list of **Proscan TV remote codes** is so

valuable. You cannot simply rely on a one-size-fits-all answer. The code that works for a 2019 Proscan model might be completely different from one manufactured in 2015. This guide consolidates the most commonly known codes to save you time and frustration.

---

### WHERE TO FIND THE CORRECT PROSCAN TV REMOTE CODES

---

Before you start pressing buttons, you need to locate the correct code for your specific television. There are several reliable methods for finding this information, and you should always try them in the order listed below for the best results.

## 1. Check Your Universal Remote's Code List

Most universal remotes come with a paper manual or an online guide that includes a section dedicated to Proscan. Look under the "P" section of the brand list. Common codes listed for Proscan often include sequences like **10178**, **10463**, **10650**, **11047**, **11312**, **11617**, **11935**, **12049**, and **12390**. These are industry-standard starting points. If you have a remote from GE, One For All, or RCA, these numbers are your best first attempt.

## 2. Perform an Automatic Code Search

If you do not have the manual, almost every universal remote has an auto-search or "code scan" feature. This is often the easiest method. You typically press and hold the "Setup" or "Code Search" button until the LED light stays on, then point the remote at the TV and repeatedly press the "Power" or "Channel Up" button. The remote will cycle through its internal database of **Proscan TV remote codes** until it finds a match. When the TV turns off, you press "Enter" or "OK" to lock in the code. This method is slower but highly reliable.

## 3. Consult the Manufacturer's Website

If you are using the original Proscan remote (or a replacement from the brand), you can often find the code printed inside the battery compartment or on the back of the remote itself. Failing that, the Proscan support website or the website of the universal remote brand (like GE, Philips, or Skyworth) usually provides searchable databases where you can enter your TV's model number.

---

## STEP-BY-STEP PROGRAMMING GUIDE

---

Once you have a list of potential **Proscan TV remote codes**, programming your remote is a straightforward process. While the exact key sequence varies slightly between remote brands, the logic is almost universal. Follow these steps carefully.

### Method 1: Direct Code Entry

This is the fastest method if you have a confirmed code.

- **Step 1:** Turn on your Proscan TV manually.
- **Step 2:** Press and hold the "Setup" button on your universal remote until the red light turns on. On some remotes, you hold the "Code Search" or "TV" button.
- **Step 3:** Press the "TV" button on the remote (if applicable) to tell the remote which device you are programming.
- **Step 4:** Enter the first 4-digit or 5-digit code from your list (e.g., **10463**). The LED light should turn off once the code is accepted.
- **Step 5:** Test the remote by pressing "Power," "Volume," and "Input." If the TV responds, you are done. If not, repeat the process with the next code on your list.

### Method 2: The Auto-Scan Method

Use this method if direct entry codes are not working or you do not have a code list.

- **Step 1:** Turn on your Proscan TV manually.
- **Step 2:** Press and hold the "Setup" or "Code Search" button until the indicator light stays on.
- **Step 3:** Press the "TV" button on the remote.
- **Step 4:** Press and release the "Power" button repeatedly. The remote will send a "Power Off" signal for each code in its memory. You will see the LED light blink with each press.
- **Step 5:** The moment your Proscan TV turns off, **immediately** press the "Enter" or "OK" button to save the code. This locks in the correct sequence.

---

## COMPREHENSIVE LIST OF PROSCAN TV REMOTE CODES

---

To make your search easier, here is a consolidated list of the most commonly reported working codes for Proscan televisions. These codes are compatible with the majority of universal remotes on the market, including GE, Philips, One For All, and RCA brands.

## 4-Digit Codes

- **10463** (Most common)
- **10178**
- **10650**
- **11047**
- **11312**
- **11617**
- **11935**
- **12049**
- **12390**
- **10012**

## 5-Digit Codes

Some newer universal remotes require a five-digit sequence. If the four-digit codes fail, try these.

- **12049**
- **11617**
- **11312**
- **10758**
- **10914**

**Note:** If none of these **Proscan TV remote codes** work, your television may be a very old model or a rebranded unit from a different manufacturer. In this case, try codes for Sanyo, RCA, or even Emerson, as Proscan has historically shared hardware with

these brands.

---

### TROUBLESHOOTING COMMON ISSUES

---

Even with the correct codes, things can sometimes go wrong. Here are the most common issues and how to fix them.

## The Remote Won't Accept Any Code

This usually indicates a problem with the remote itself or a mismatch in brand recognition. First, replace the batteries in the remote. Weak batteries can prevent the remote from storing codes properly. Next, ensure you are pressing the "TV" button before entering the code. If you are programming a remote for a soundbar or DVD player, the code will not work for the TV. Finally, try the auto-scan method described above. It bypasses the need for manual code entry and can find codes that are not in the common lists.

## The Code Works, But Only Some Buttons Function

This is a common frustration. You might get the power button to work, but the volume or input buttons do nothing. This happens because some codes only cover basic functions. Try the next code on your list. For example, if **10463** gives you power but no

volume, try **10178** or **10650**. Each code accesses a different layer of the TV's command set. Eventually, you will find one that unlocks all features.

## The Remote Works Intermittently

Intermittent function is rarely a code problem. It is usually a line-of-sight issue. Ensure there are no objects blocking the sensor on the front of your Proscan TV. Also, check the remote's IR emitter. If it is dirty or scratched, clean it gently with a microfiber cloth. If the issue persists, the remote may be damaged, and you may need a replacement.

### ALTERNATIVE SOLUTIONS: USING A SMARTPHONE AS A REMOTE

If you have exhausted all **Proscan TV remote codes** and still cannot get a universal remote to work, or if you simply prefer a modern solution, you can use your smartphone. Most Proscan TVs manufactured after 2010 have HDMI-CEC capabilities, but if your set is older, you will need an external IR blaster.

## Universal Remote Apps

Apps like "Peel Smart Remote" or "AnyMote" are popular choices. These apps often have extensive databases that include Proscan codes. The app uses your phone's built-in IR blaster (if it has one,

such as on many Samsung and LG phones) or connects to an external Wi-Fi-based IR blaster. Simply download the app, select "TV," search for Proscan, and the app will attempt to sync with your television. This method avoids the need for physical codes entirely, as the app does the searching for you.

### HOW TO FIND YOUR PROSCAN TV MODEL NUMBER

If you are struggling to find the right code, knowing your exact model number is crucial. The model number is a unique identifier that tells you exactly which hardware version you own. You can find it in three places:

1. **On the back of the TV:** Look for a sticker or engraved plate near the power cord or ventilation grills.
2. **In the settings menu:** For newer Proscan TVs, go to *Menu > Settings > System Info* or *About TV*.
3. **On the original box:** If you still have the packaging, the model number is printed on the side label.

Once you have this number, you can search online specifically for "codes for Proscan TV model [your number]" which will yield more precise results than a generic search.

### PROSCAN TV REMOTE CODES FOR SPECIFIC CABLE BOXES

Sometimes, the issue is not programming the universal remote to control the TV, but programming your cable remote to control the Proscan TV. If you have a remote from Xfinity, Spectrum, DirecTV, or Dish Network, you need a different set of instructions. For

these providers, you usually enter a setup